 


Assembly Instructions

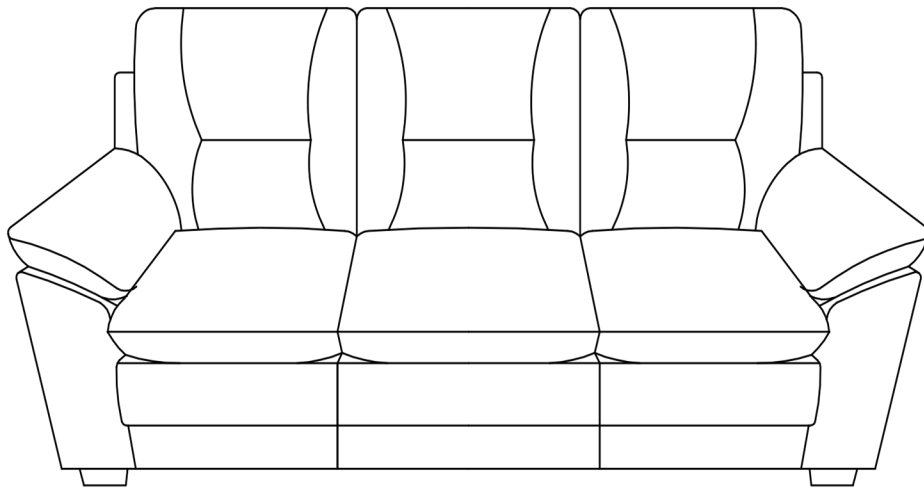

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY



DIFFICULT

Tools Required For Assembly:

Phillips Screwdriver



(Not Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

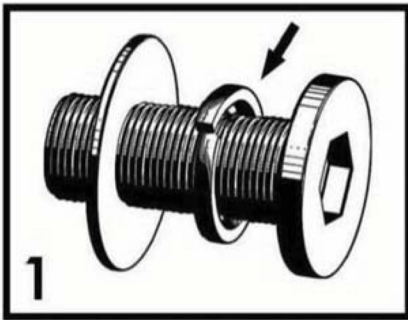

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

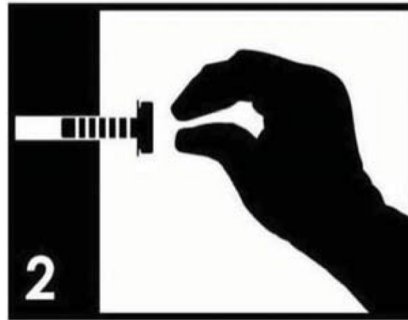

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

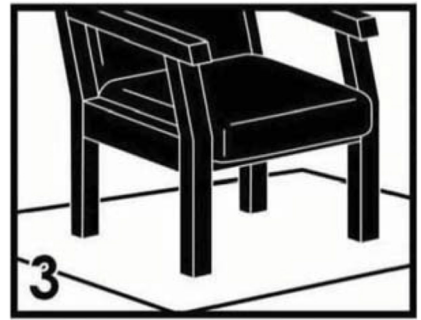

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

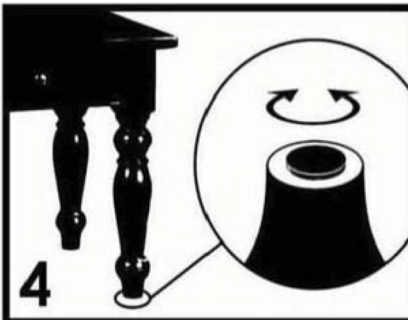

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

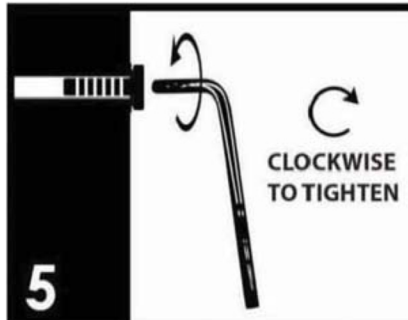

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

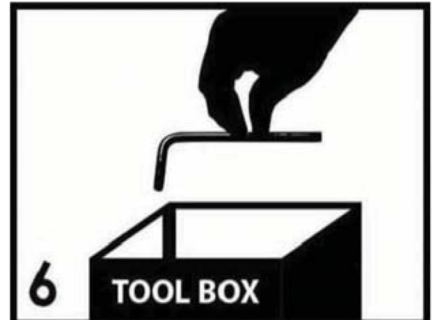

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


Parts List

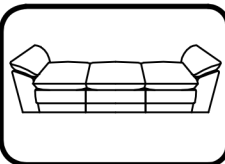


#1 x 1pc
Sofa

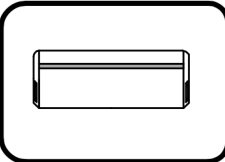 


#2 x 1pc
Backrest

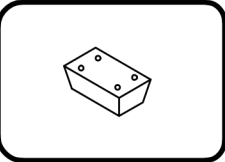 


#3 x 4pcs
Leg

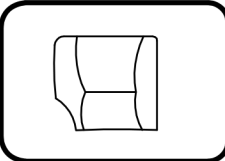 

#4 x1pc
Left Cushion

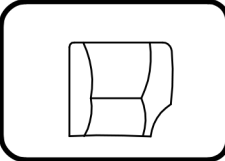 


#5 x 1pc
Right Cushion

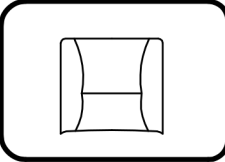 

#6 x 1pc
Middle Cushion

 Hardware List

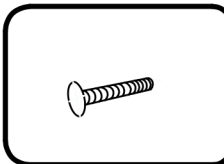


#A x 16pcs
Screw



#1

 1. With the help of another person, carefully place the sofa (#1) onto a protected surface.

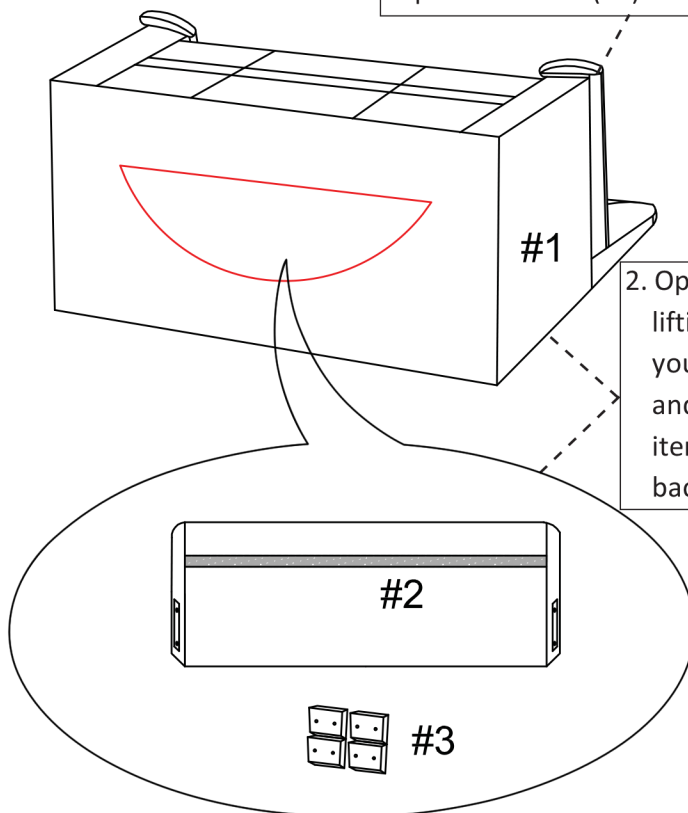


2. Open the bottom by carefully lifting the black fabric and you will find the backrest (#2) and cushions (#3), take out the items, then place the fabric back into original position.



#2
 
#A x 16pcs


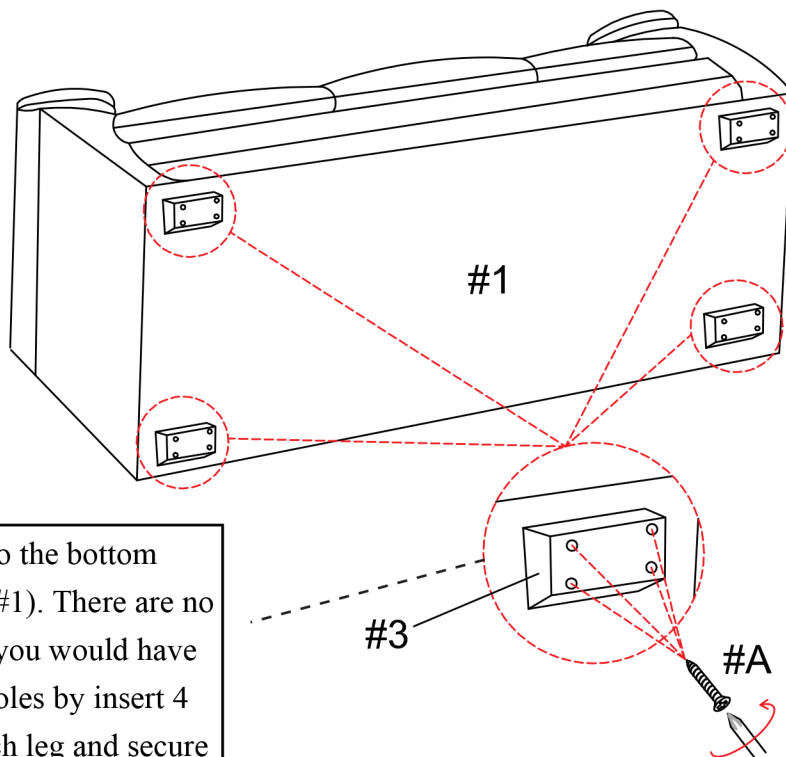


Align the legs (#3) to the bottom corners of the sofa (#1). There are no pre-drilled holes so you would have to make your own holes by insert 4 screws (#A) into each leg and secure using the Phillips screwdriver.




1. Carefully place the sofa (#1) upright.

  2. Assemble the backrest (#2) with the sofa (#1) by aligning the brackets of the back rest (#2) with the brackets of the sofa (#1). Make sure all parts are firmly secured.

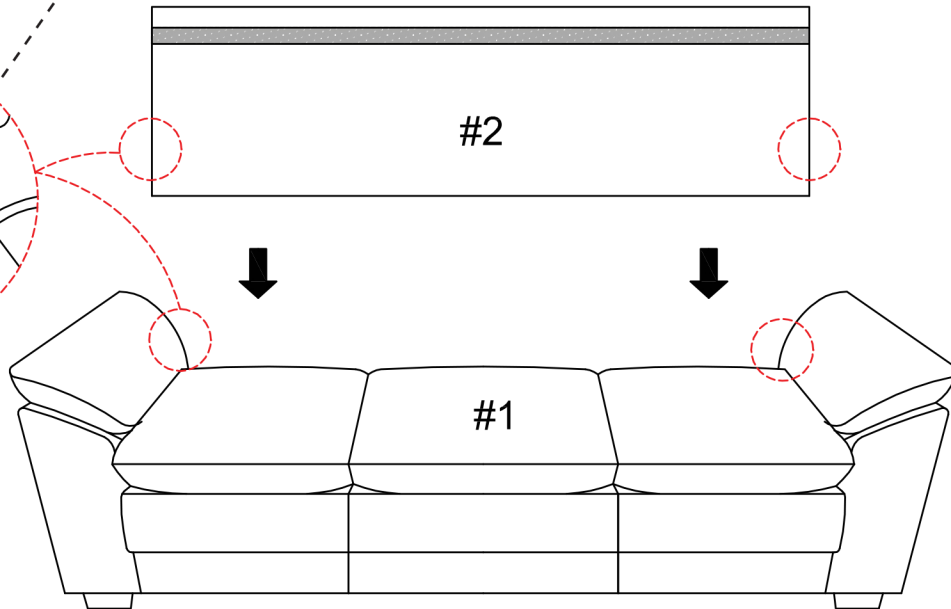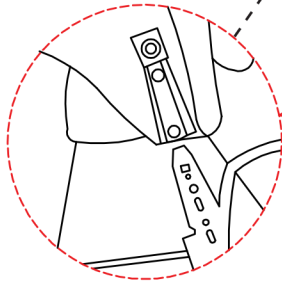

 Attach the cushions (#4,5,6) to the velcro along the backrest (#2).

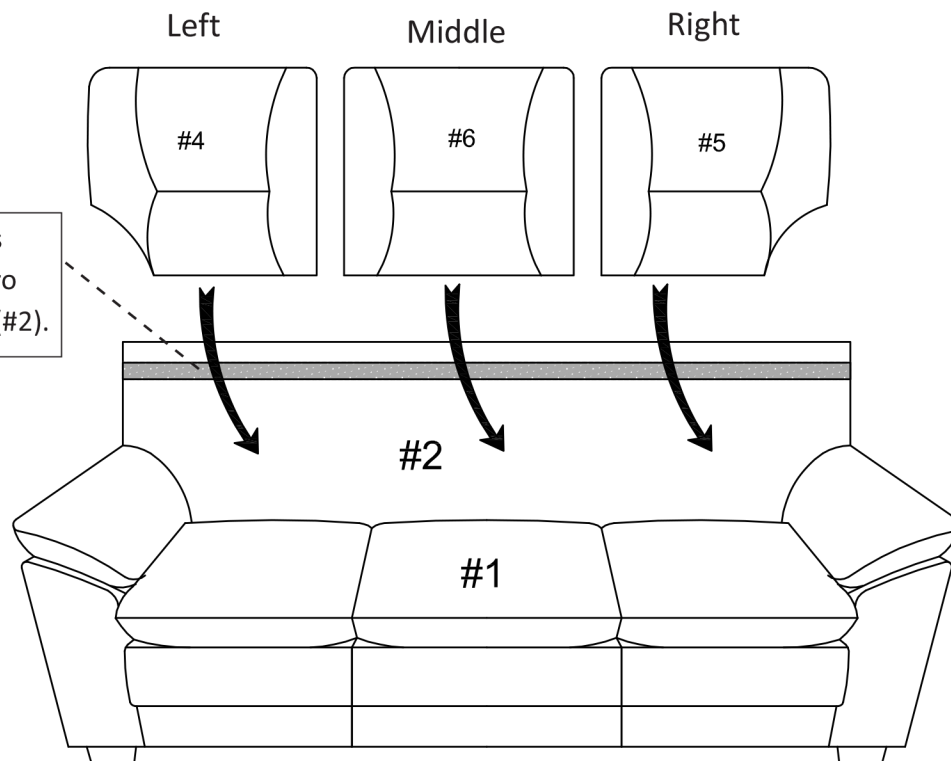

ASSEMBLY IS COMPLETED