 


Assembly Instructions

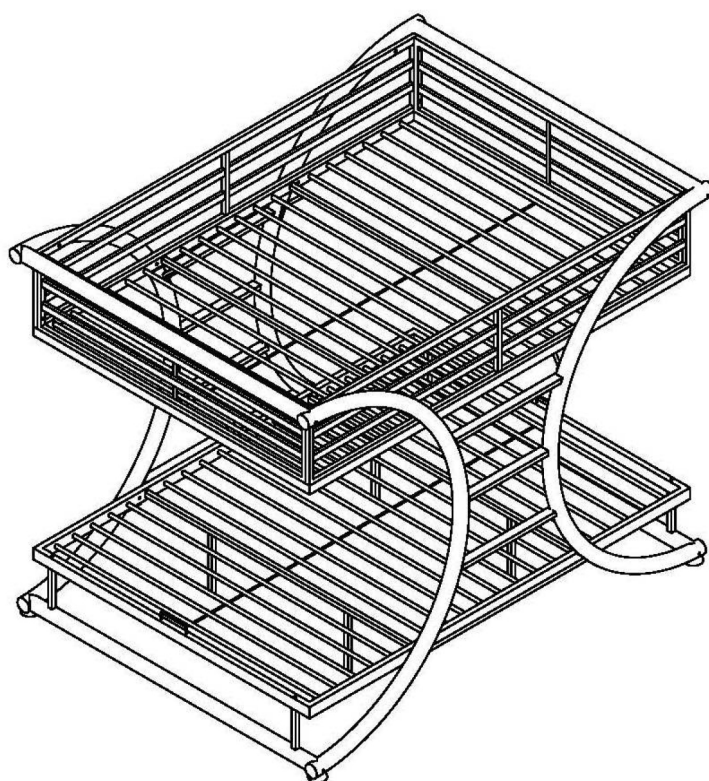

 
ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required for Assembly:

Allen Wrench




2 PERSONS RECOMMENDED

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 
BASIC ASSEMBLY TECHNIQUES

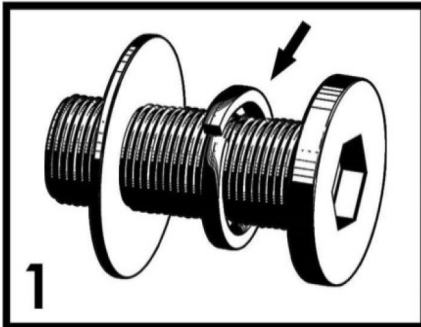


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.



 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

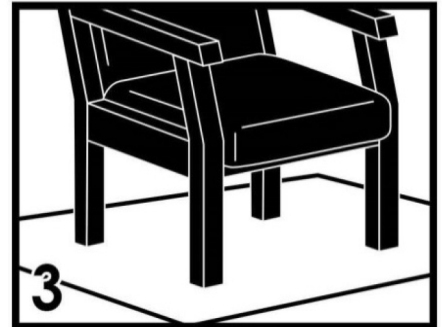

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

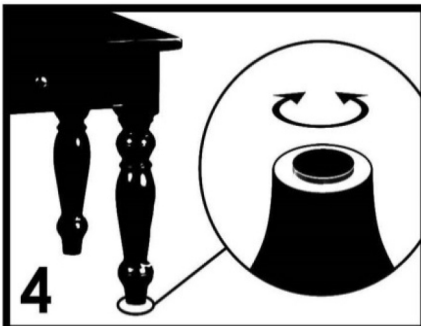

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

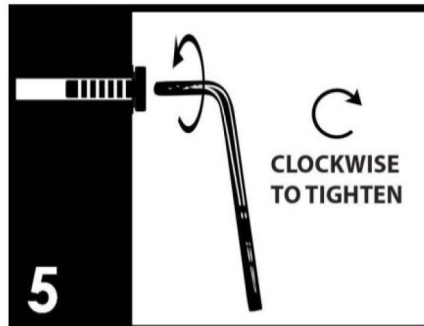

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

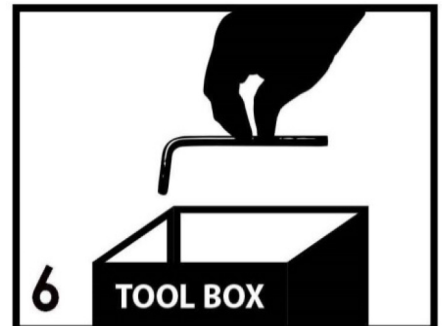


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.




FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

 PARTS LIST

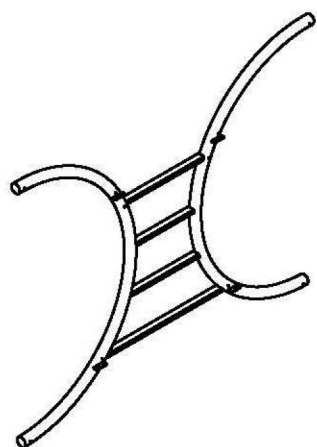


SIDE PANEL

 ① x2pcs

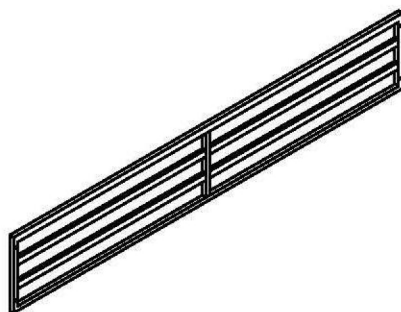


GUARDRAIL

 ② x2pcs

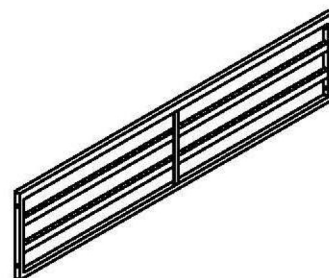


GUARDRAIL

 ③ x2pcs

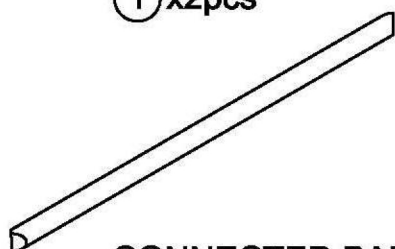


CONNECTED BAR

 ④ x2pcs

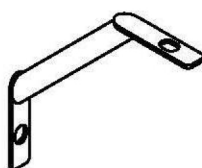


CONNECTED PLATE

 ⑤ x4pcs

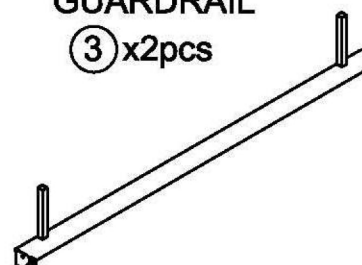


BOTTOM CONNECTED BAR

 ⑥ x2pcs

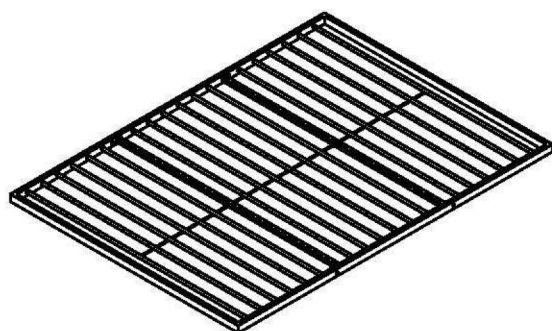

BASE FRAME

 ⑦ x1pc

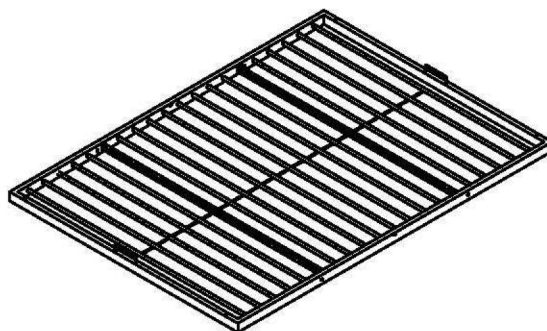

BASE FRAME



⑧ x1pc







SUPPORT LEG

⑨ x4pcs

HARDWARE LIST

A		BOLT 1/4"X3"	12PCS
B		BOLT 1/4"X2 1/4"	4PCS
C		BOLT 1/4"X1 3/4"	4PCS
D		BOLT 1/4"X1 1/2"	22PCS

E		BOLT 1/4"X5/8"	26PCS
F		WASHER Ø16mm	60PCS
G		ALLEN WRENCH 4x4(mm)	1PC
H		LEVELER	4PCS



Before you begin, please read Page 2 of "Assembly and Care Advice" AND Page 8 of "Safety Warnings."

And remember, do not tighten until each step is completed or instructed.

 
MD

STEP 1:

 
H  4PCS

ASSEMBLY


 


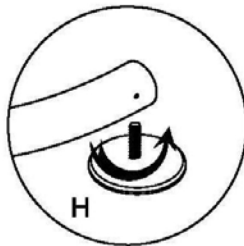Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.

 
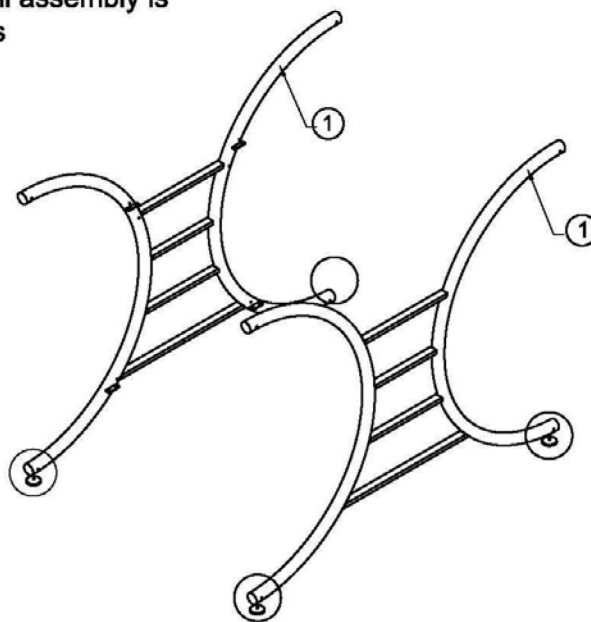 


Turn right (clockwise) to tighten






STEP 2:

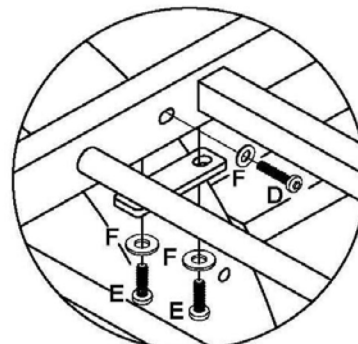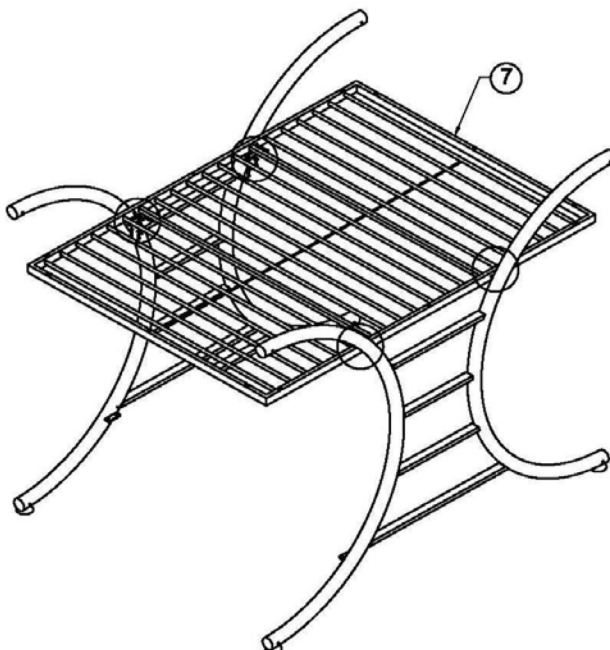
D  4PCS
E  8PCS
F  12PCS
G 



Turn right (clockwise) to tighten



 

STEP 3:

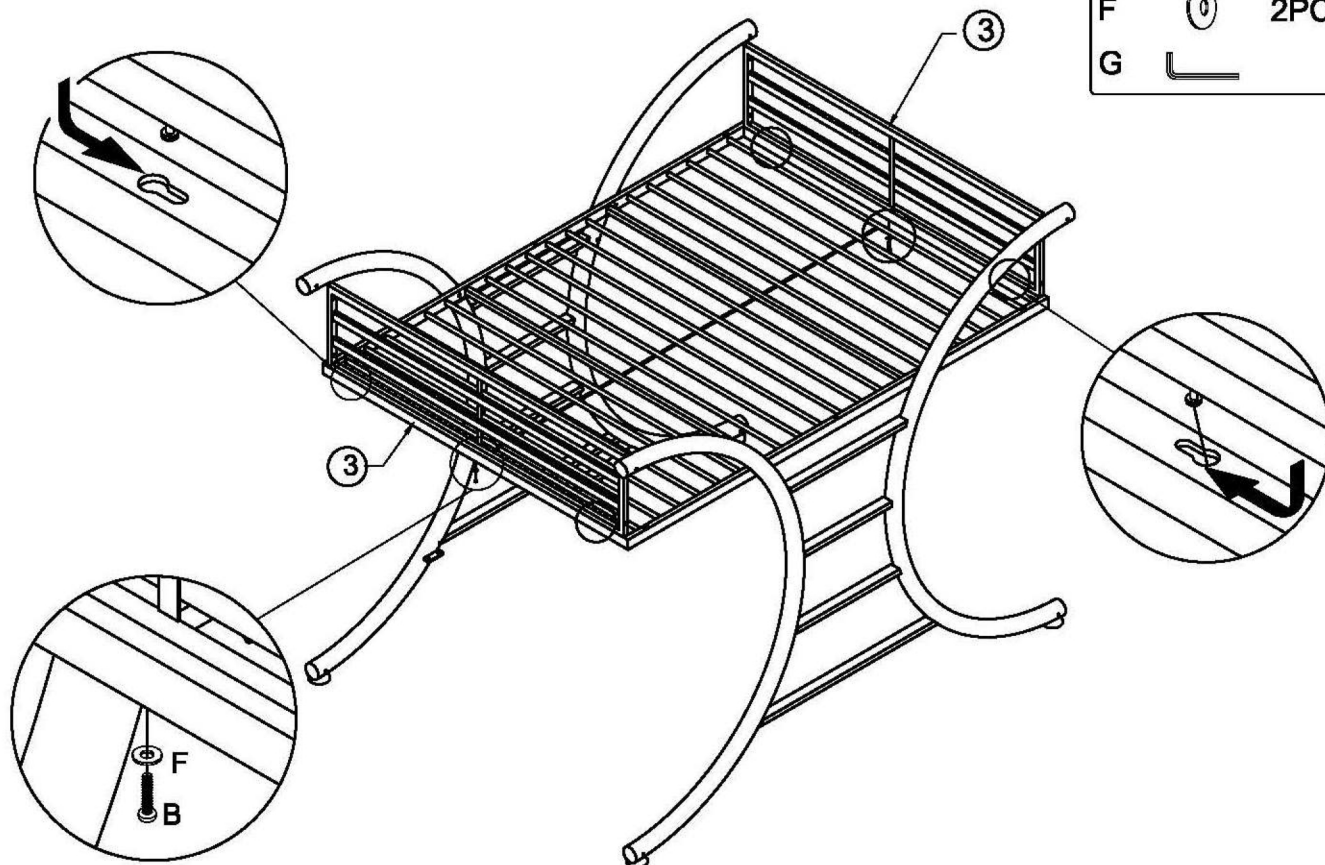
B		2PCS
F		2PCS
G		



 Turn right (clockwise) to tighten




 
STEP 4:

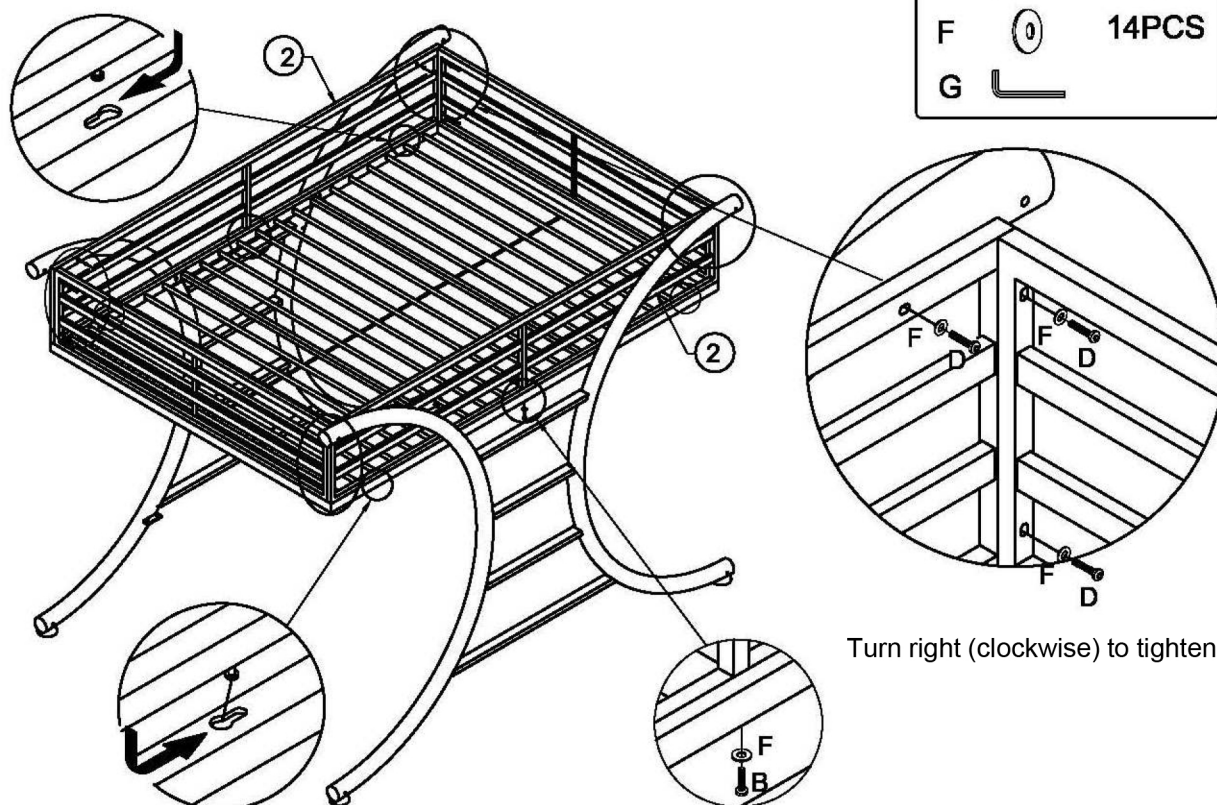
B		2PCS
D		12PCS
F		14PCS
G		




 

Turn right (clockwise) to tighten


STEP 5:

A		8PCS
E		2PCS
F		2PCS
G		

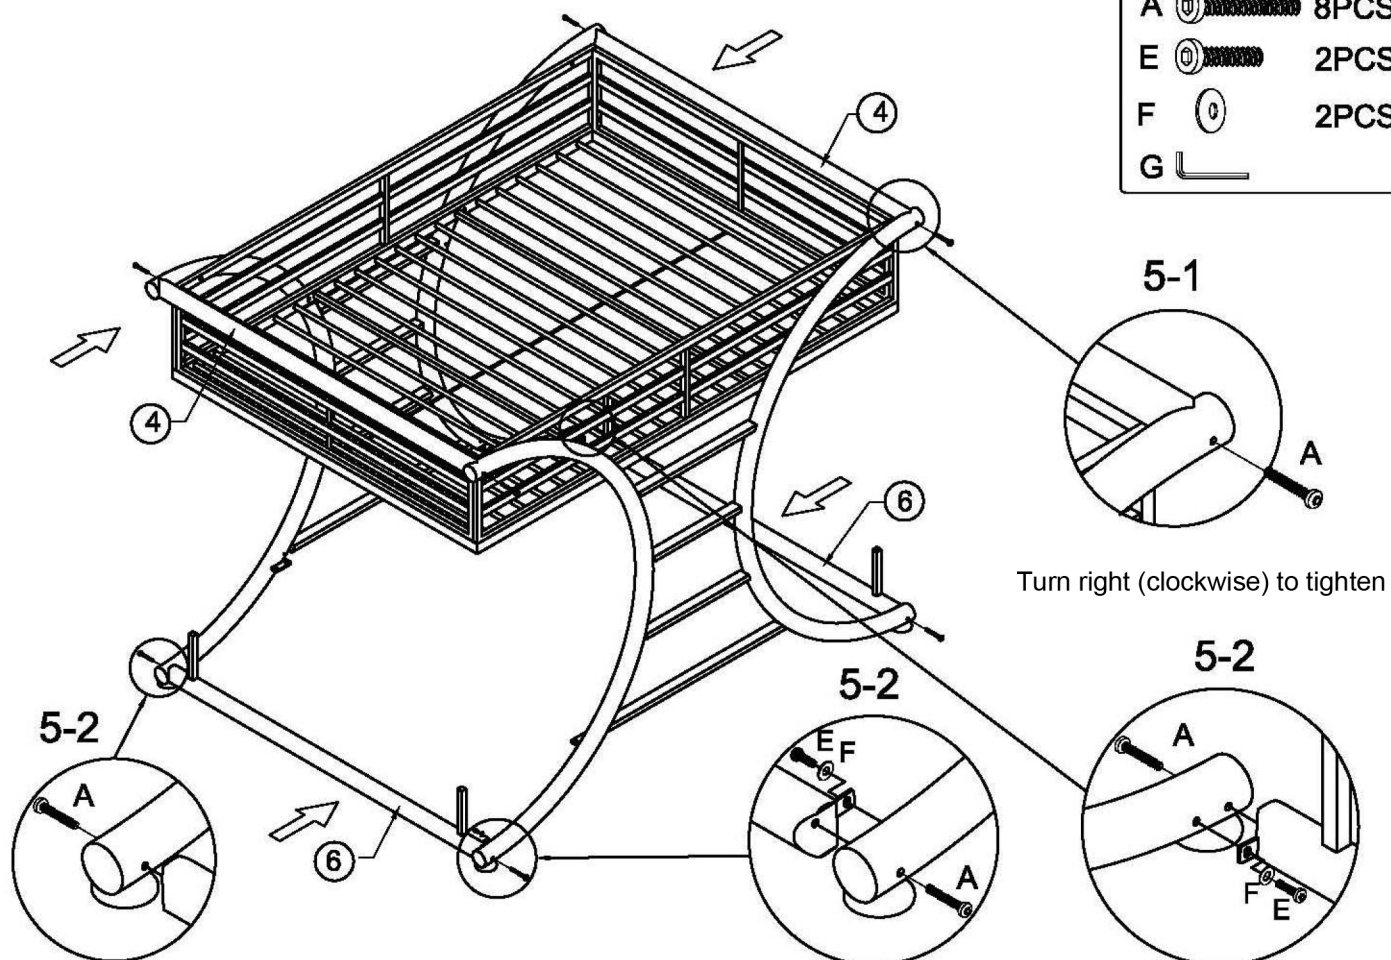 



  

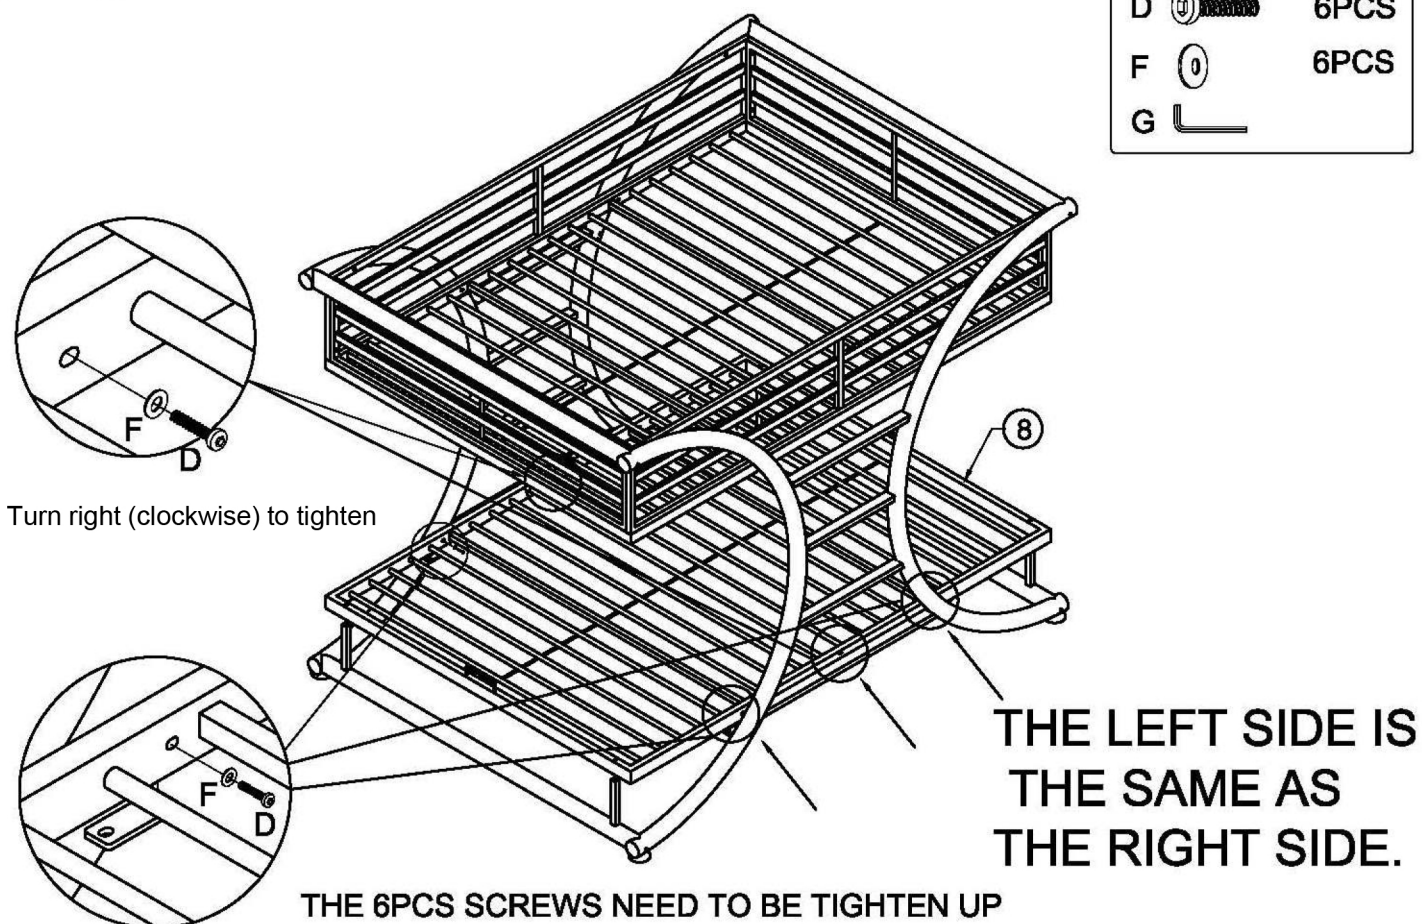 
STEP 6:

D		6PCS
F		6PCS
G		






  
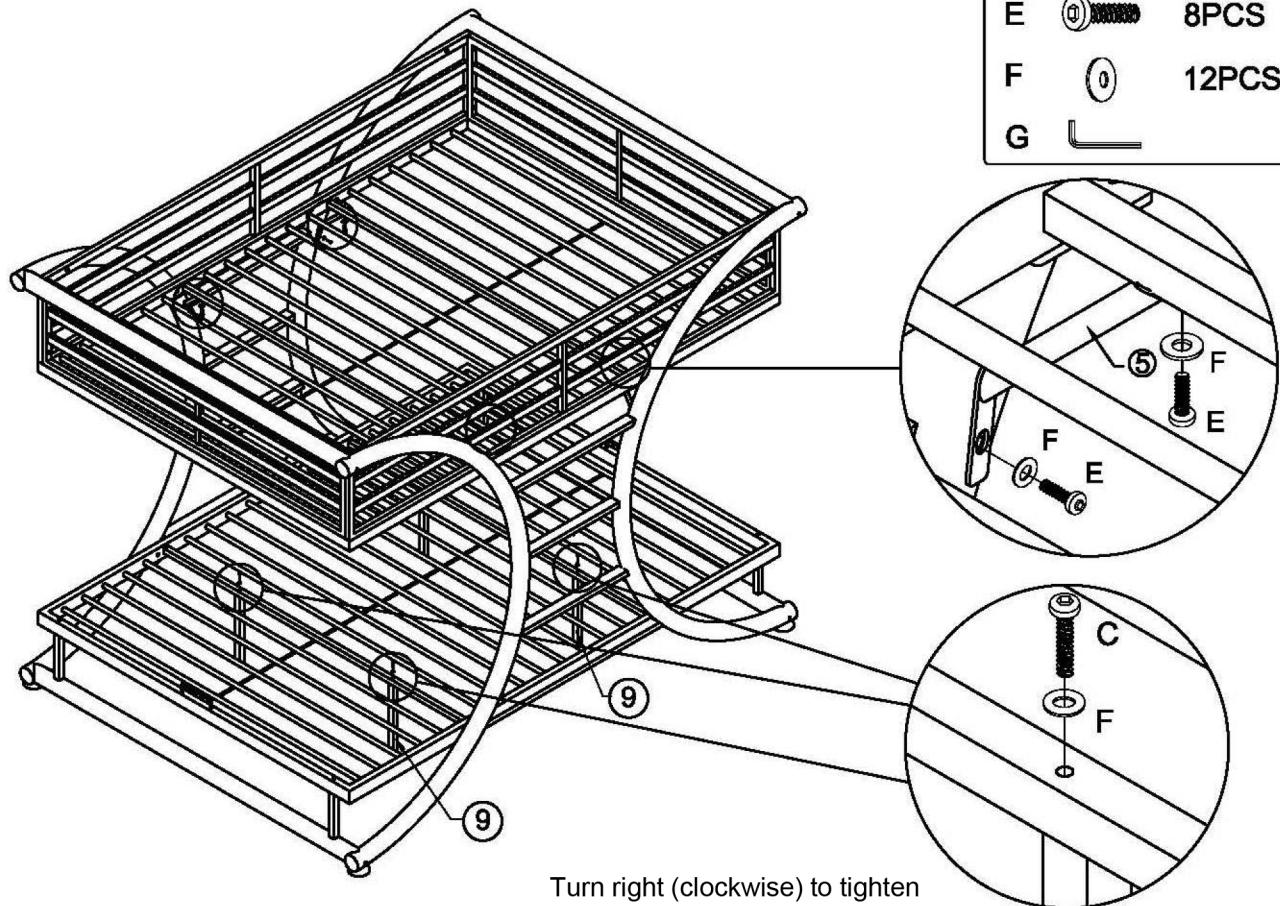 
STEP 7:

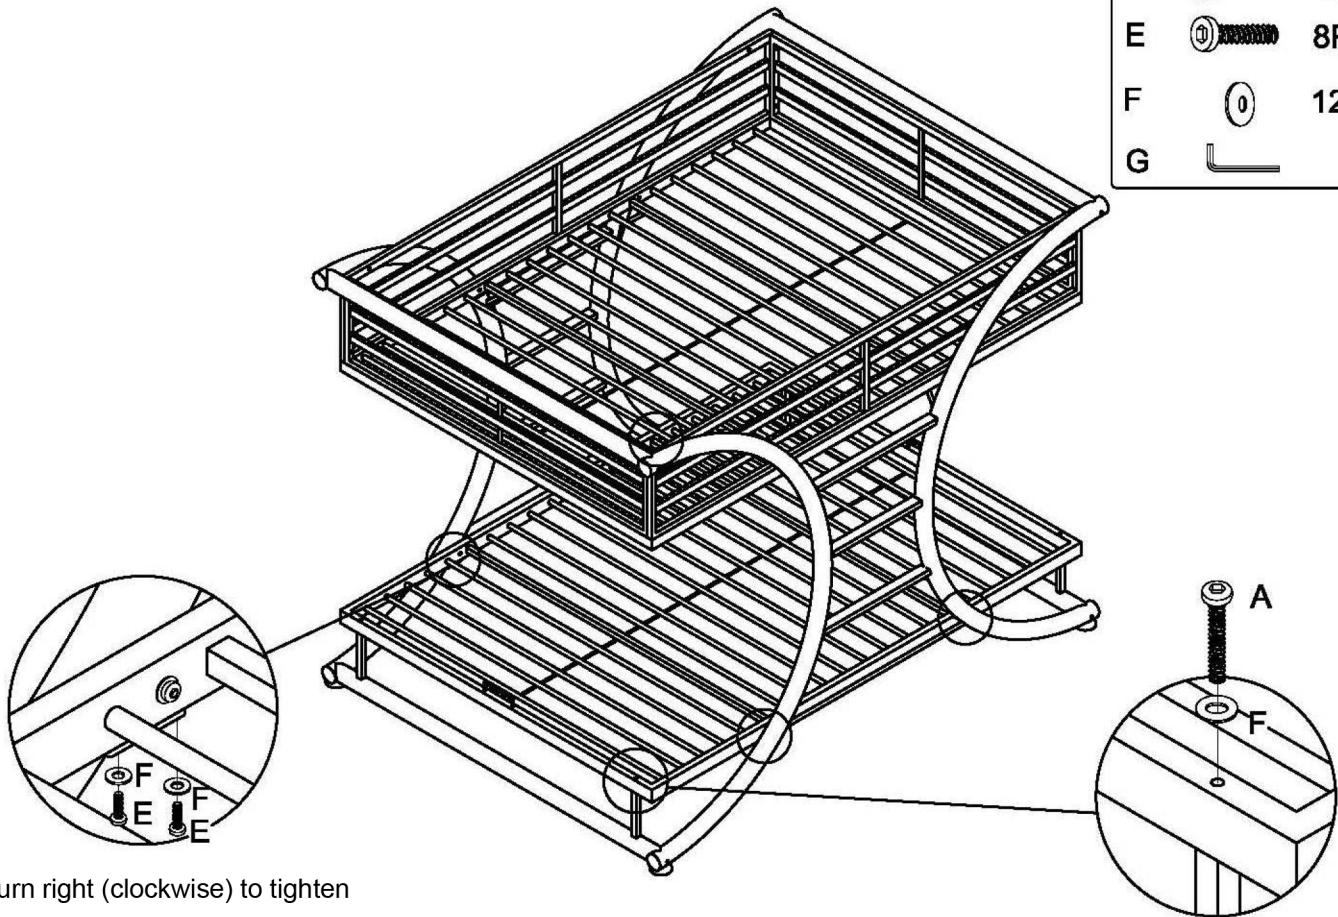A		4PCS
E		8PCS
F		12PCS
G		



STEP 8:

C		4PCS
E		8PCS
F		12PCS
G		



Safety Warnings for Bunk Beds

1. Read and follow the information on the warnings appearing on the bunk bed end structure and on the carton. Do not remove warning label from the bed.
2. Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls. The proper mattress size for the UPPER bunk should be 75" long x 54" wide x 6" high (no higher than 6"). The proper mattress size for the LOWER bunk should be 75" long x 54" wide x 6" to 8" high.
3. Surface of mattress must be at least 5 inches (127 mm) below the upper edge of guardrails.
4. Do not allow persons under 6 years of age to use the upper bunk.
5. Periodically check and ensure that the guardrails, ladder, handle and other components are in their proper position, free from damage, and that all connectors are tighten and secured.
6. For safety reasons, especially on the upper bunk bed, DO NOT allow rough playing or jumping on the bed and do not allow playing or hiding under the bed.
7. Always use the ladder for entering and leaving the upper bunk.
8. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
9. Use of a nightlight may provide added safety precaution for a person using the upper bunk.
10. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
11. The use of water or sleep flotation mattresses is prohibited.
12. No more than one person is allowed on the upper bunk at all times.
13. The MAXIMUM weight capacity for the upper bunk is not to exceed 150 lbs.
14. Keep these instructions for future reference.



WARNING: STRANGULATION HAZARD

Never attach or hang objects to any part of the bunk bed that are not designed for use with the bed. Objects such as hanger, hook, belt, bag, rope, string, etc. should not be used on or around the bunk bed.