 


# Assembly Instructions

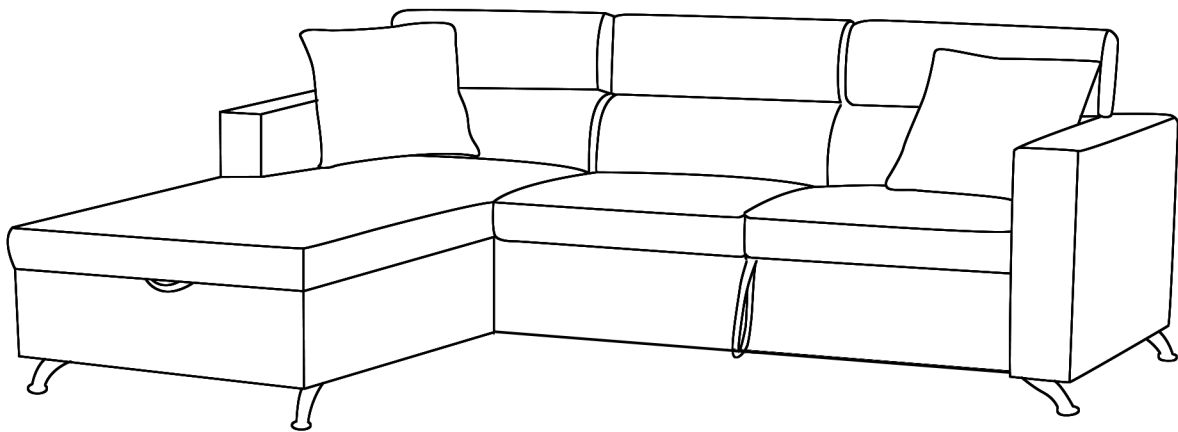

## ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

## Tools Required For Assembly:

Allen Wrench



(Included)

Phillips Screwdriver



(Not Included)




2 PERSONS RECOMMENDED


# ASSEMBLY & CARE ADVICE

 FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

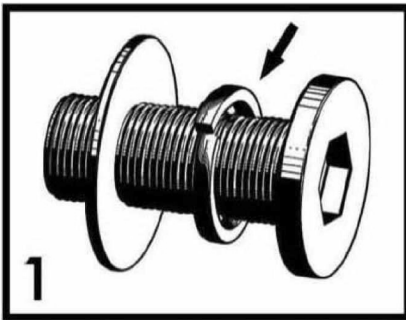

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

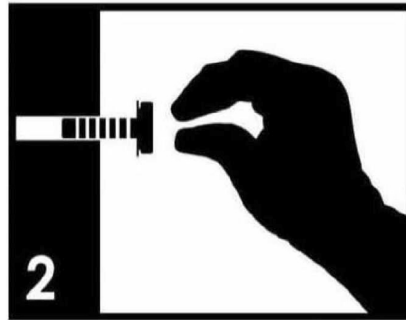

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

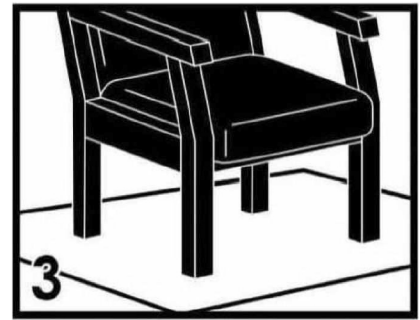

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

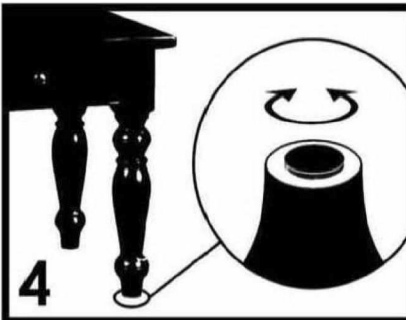

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

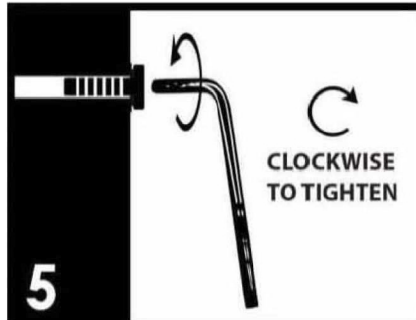

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

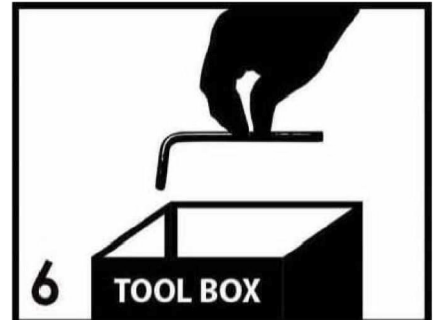


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

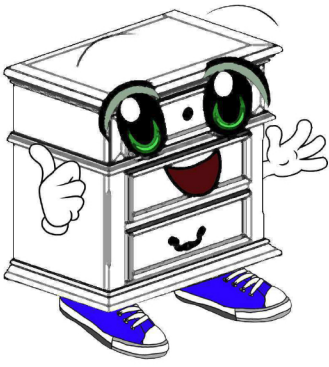


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


### Parts List

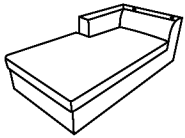 


#1 x 1pc  
Chaise

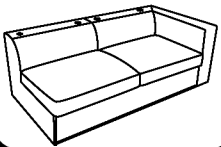 


#2 x 1pc  
Loveseat

 


#3 x 3pcs  
Headrest

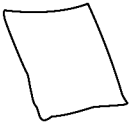 


#4 x 2pcs  
Pillow

 

#5 x 4pcs  
Wheel

 

#6 x 1pc  
Left Connecting piece

 

#7 x 1pc  
Right Connecting piece



#8 x 6pcs  
Leg

### Hardware List



#A x 1pc  
Allen Wrench



#B x 6pcs  
Bolt 5/16"X1"



#C x 6pcs  
Bolt 5/16"X2"



 
#D x 4pcs  
Bolt 5/16"X1-3/8"







#E x 40pcs  
Screw





2) Align legs (#8) to the bottom holes of the chaise (#1) and loveseat (#2). Secure with bolts (#B), then secure the surrounding holes with screws (#E) (No pre-drilled holes for screws (#E)).

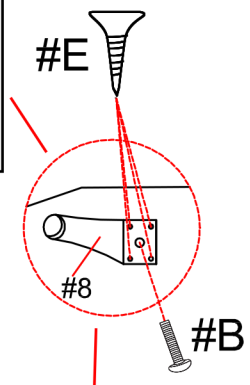

#B x 6pcs  
#E x 24pcs

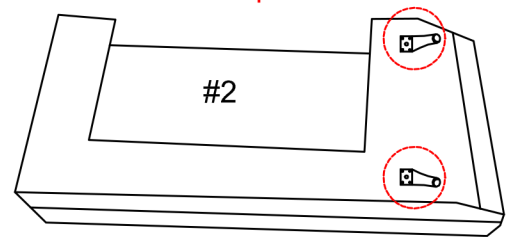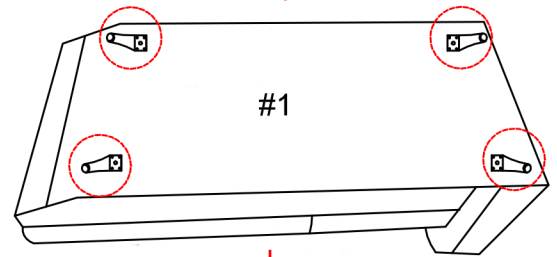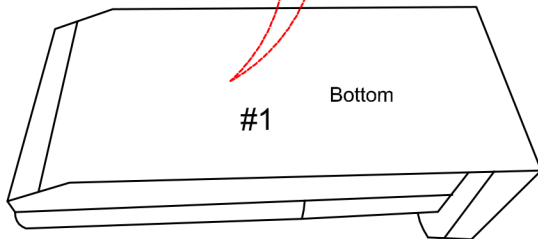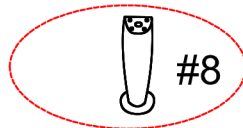    

  1) Remove the legs (#8) from the bottom compartment of the chaise (#1).

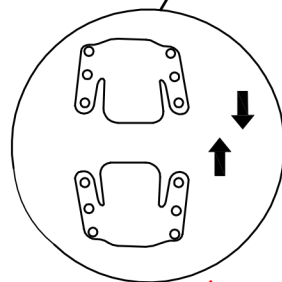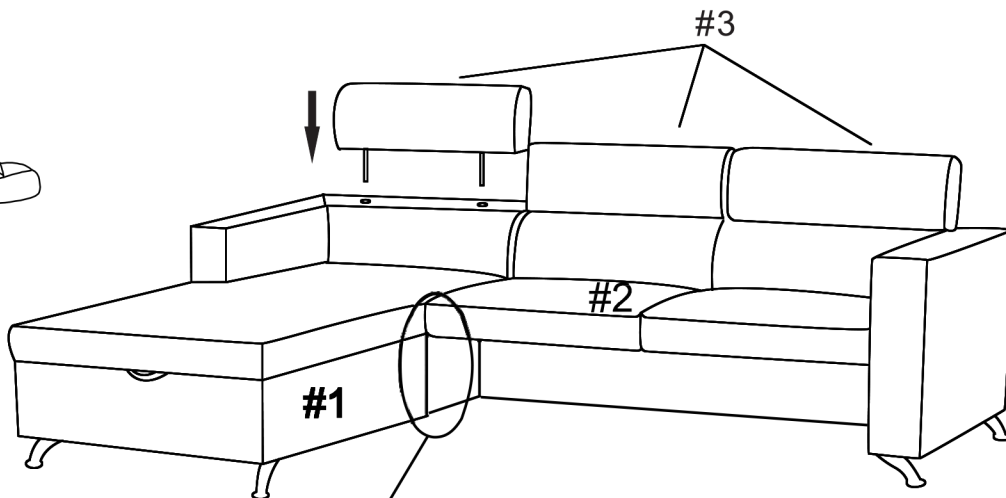


Hook the chaise (#1) and loveseat (#2) together, then firmly attach the headrests (#3) to the chaise (#1) and loveseat (#2).



#C x 6pcs  
#D x 4pcs

 2) Align the left and right connecting piece (#6,7) to the holes of the bottom frame of loveseat (#2). Secure with bolts (#C).

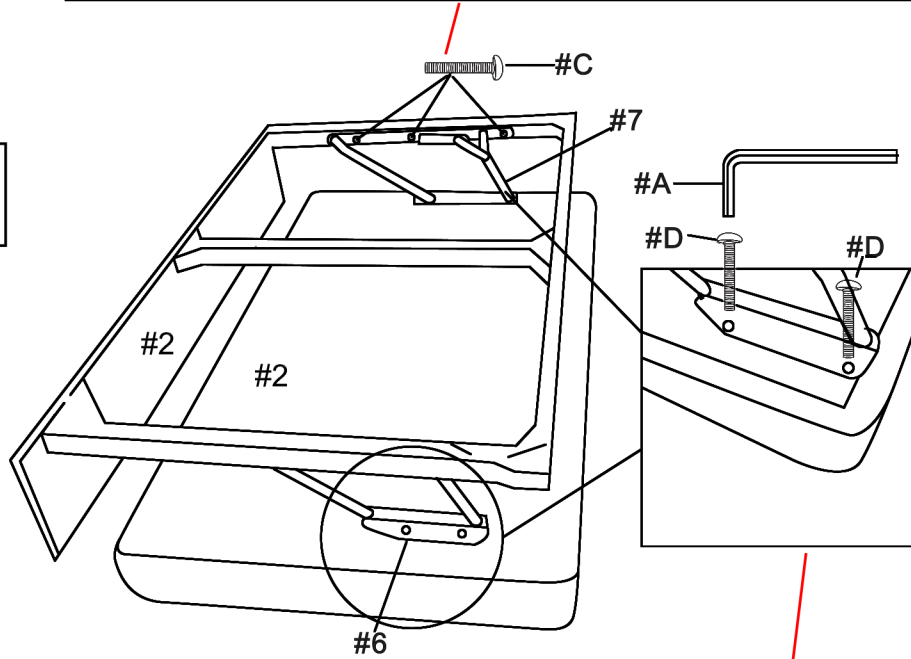





1) Align the left and right connecting piece (#6,7) to the holes of the bottom loveseat cushion (#2). Secure with bolts (#D).



#E x16pcs

    Align wheels to the holes of the loveseat frame (#2). Secure with screws (#E).

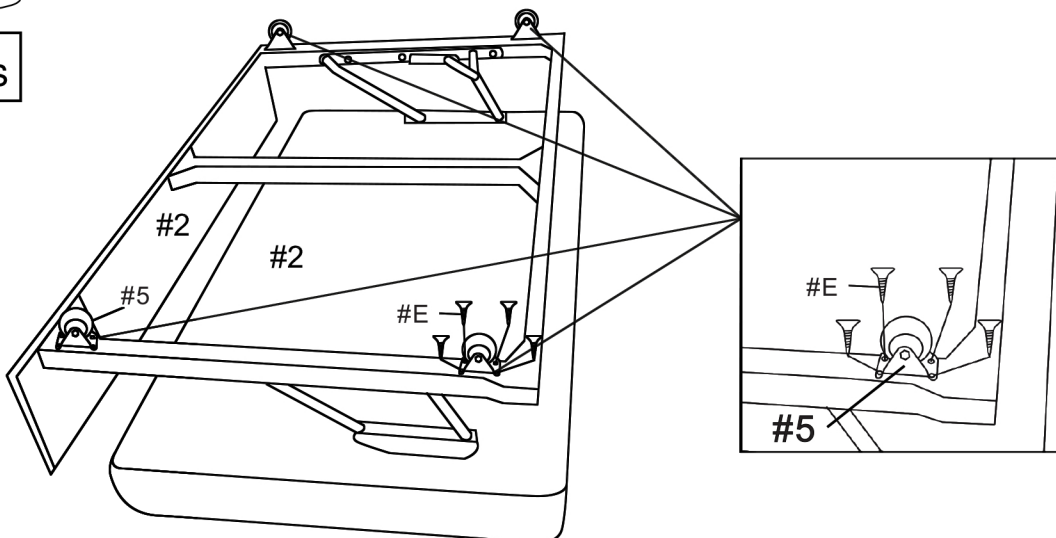

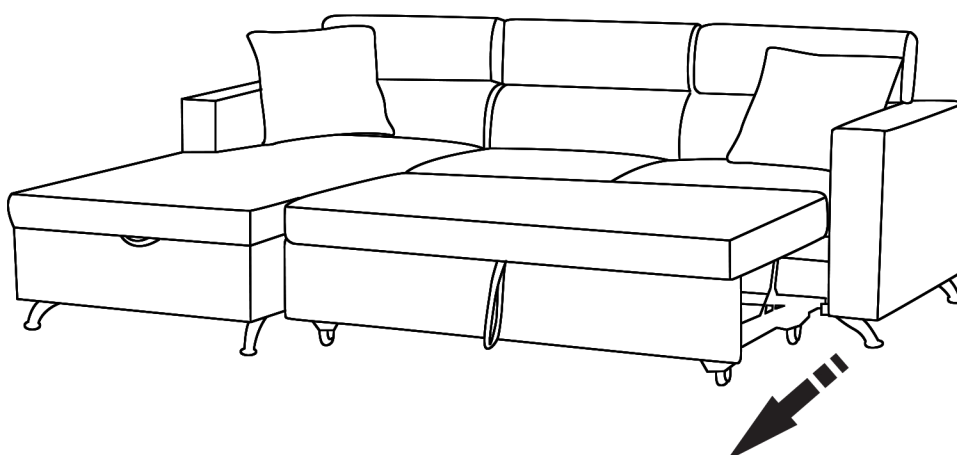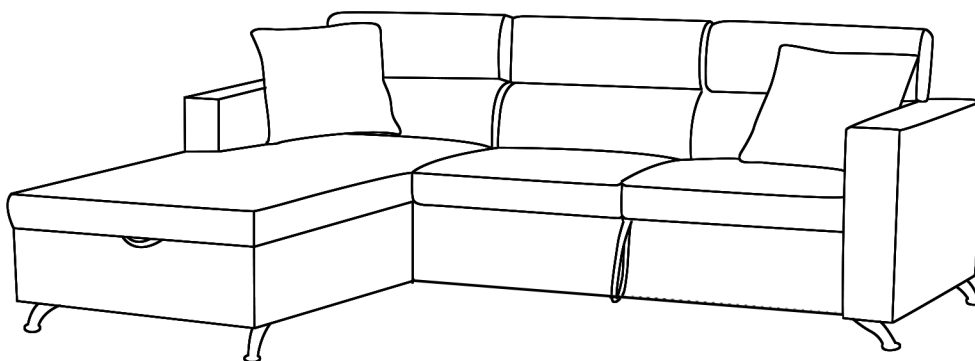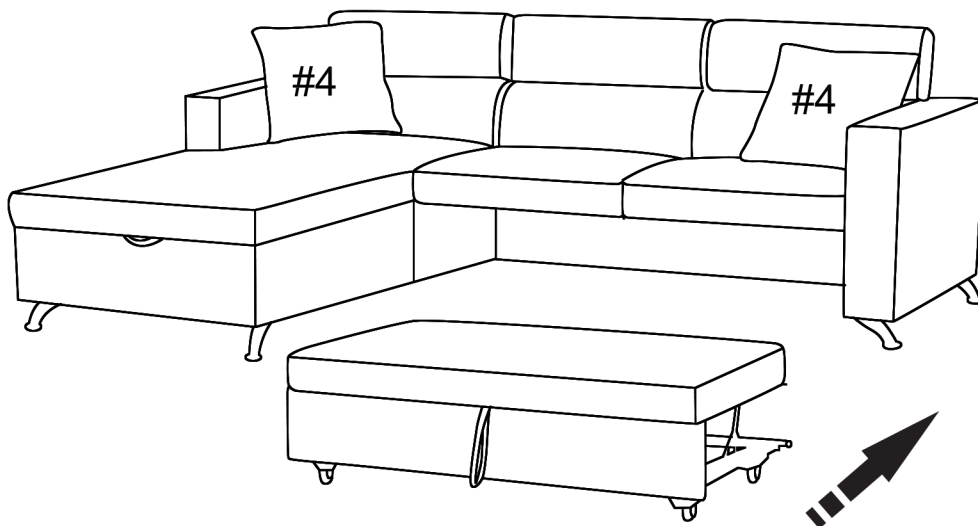

Allow out