TOOLS REQUIRED




(Included)

 
2 - People Recommended

ASSEMBLY RATING

EASY DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

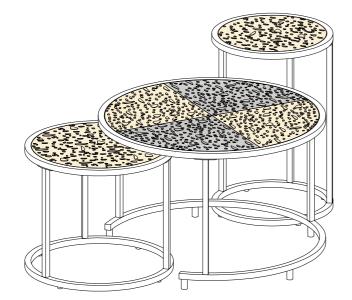





Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.



Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

PRE ASSEMBLY

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





 












Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

Suitable Location

Assembling near the area of the intended location is highly recommended.

Sufficient Space

Make sure you have enough space to move around during the assembly.

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.


Save the instructions and store

any supplied tools for later


maintenance.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

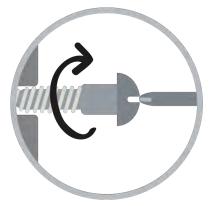


Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.

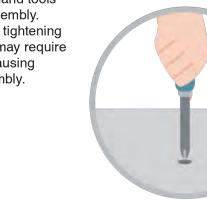

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.


3pcs Occasional table with plastic board

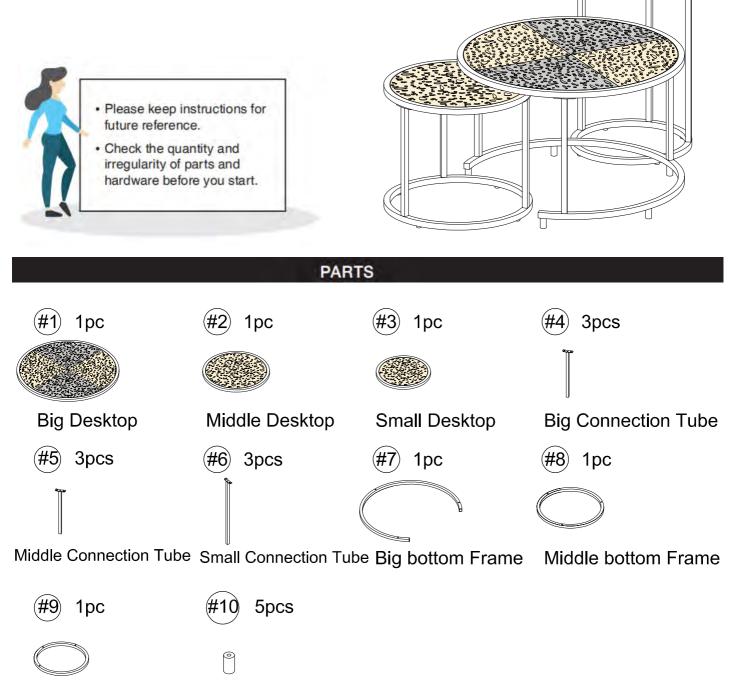

Small bottom Frame Support

3pcs Occasional table with plastic board

 CM-AC248



irregularity of parts and hardware before you start.




HARDWARE





(#E) 8pcs


Adjustable Foot M6 x 10

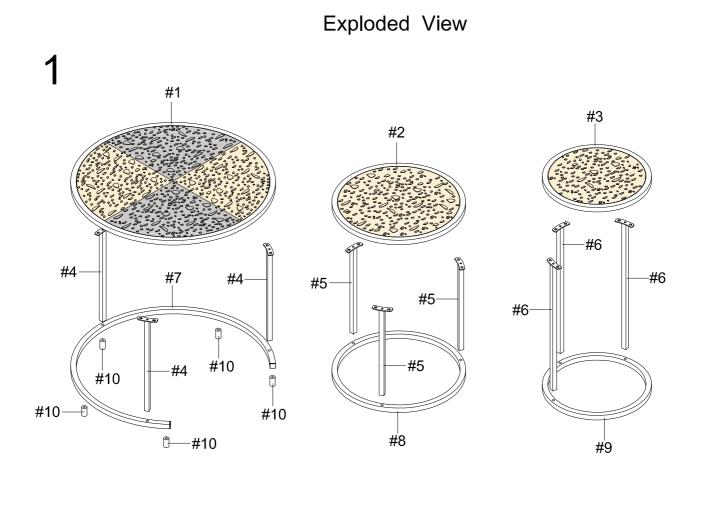

2 #4/#5/#6 Part(#1)x 1pc Align connection tubes (#4,5,6) to #D #A¶ the desktops (#1,2,3) as shown in Part(#2)x 1pc 7 the diagram, then secure by using Part(#3)x 1pc bolts (#A). #1/#2/#3 Part(#4)x 3pcs Part(#5)x 3pcs #6 Part(#6)x 3pcs #4 #5 Hardware(#A)x 18pcs #4 #5 #6 Hardware(#D)x 1pc #6 #5 #1 #4 #2 #3 Į 31

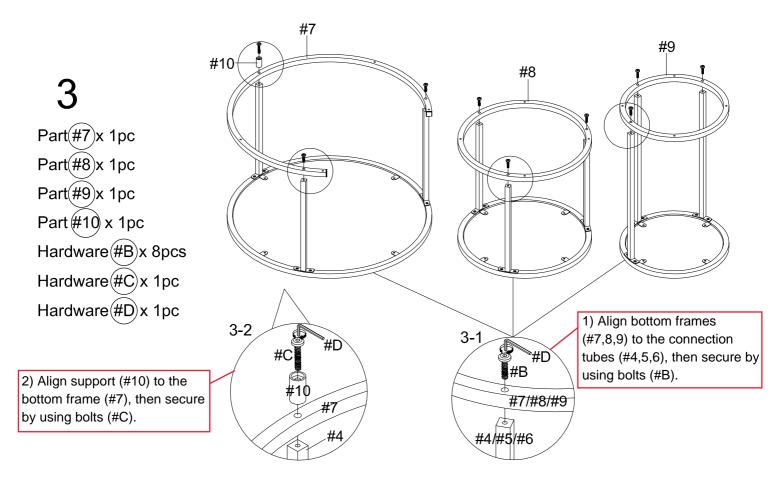

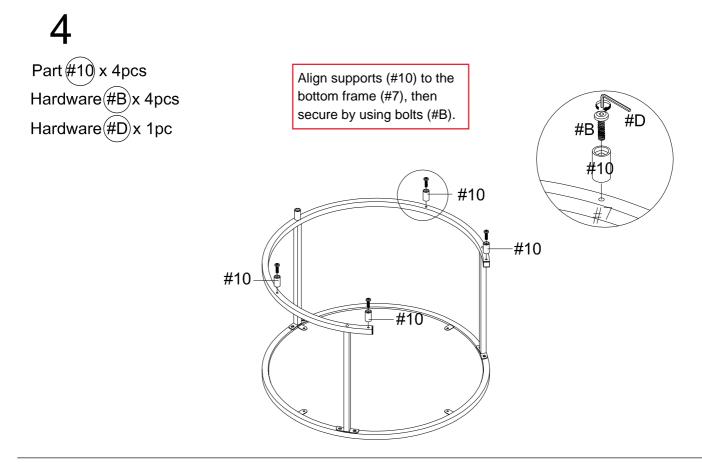

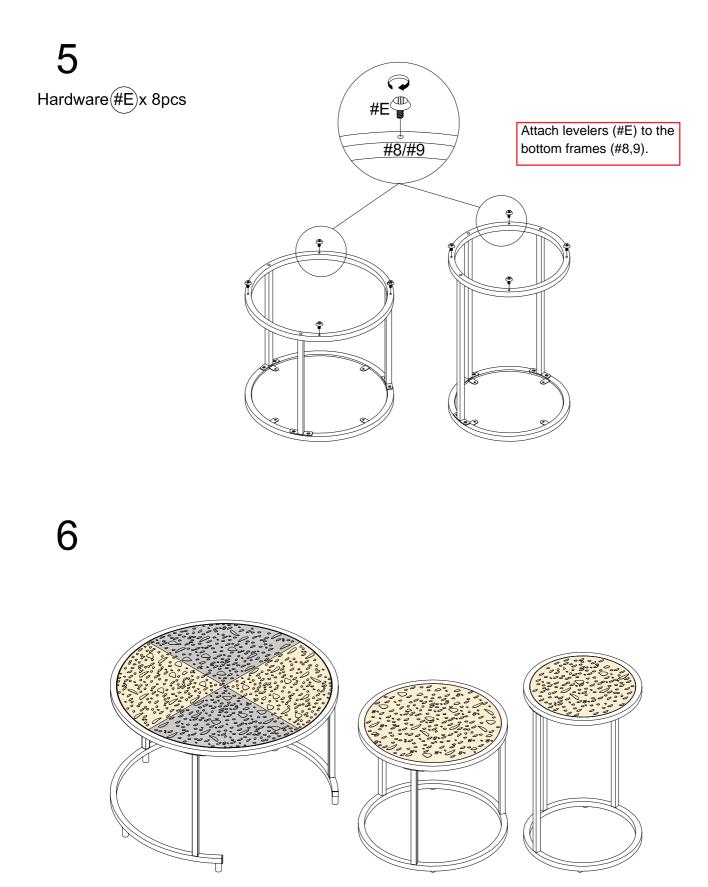



7

 




Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



To avoid damage to product please always LIFT the product when transporting of adjusting the placement.