
MUSE & LOUNGE


KD-OT1302

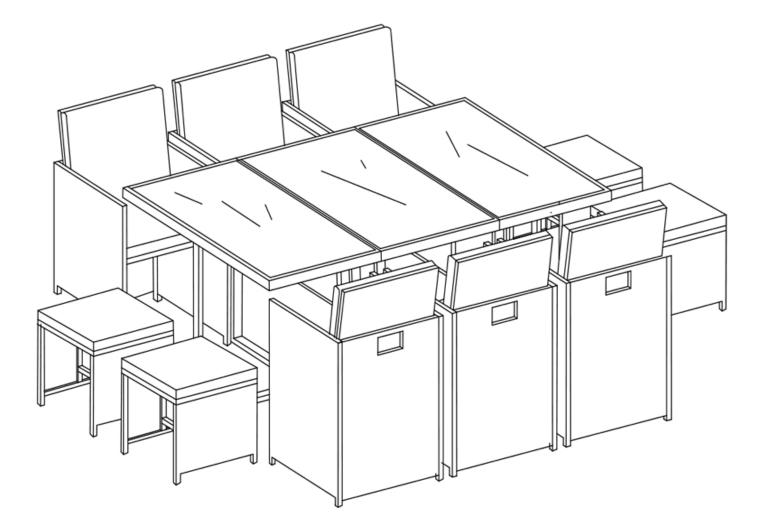

## ASSEMBLY INSTRUCTIONS 11-PIECE OUTDOOR DINING SET




 (4 pcs)







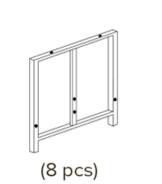




(4 pcs)



 (4 pcs)



(6 pcs)

PARTS |


A

D

G

J



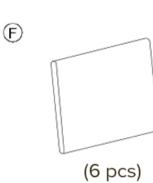



H






C

 $\bigcirc$ 

(6 pcs)

Check that you've received all parts listed below.

в

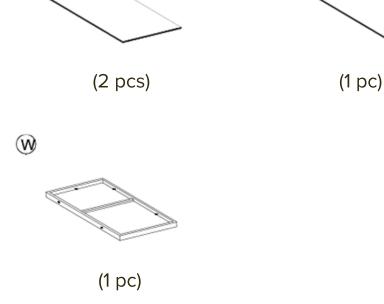



(1 pc)



M

P

(1 pc)



N

PARTS Check that you've received all parts listed below.




(6 pcs)





(1 pc)




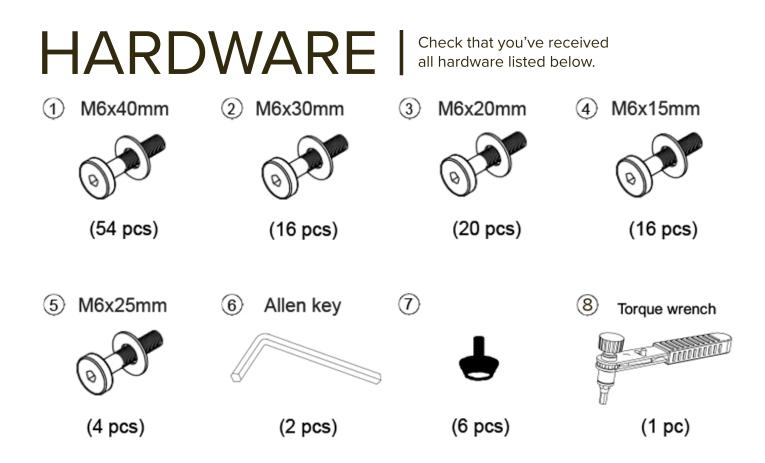

Missing something? Email us at <u>hello@museandlounge.com</u>

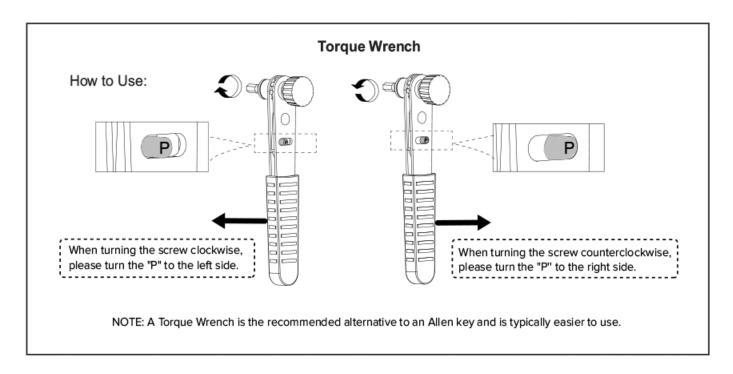


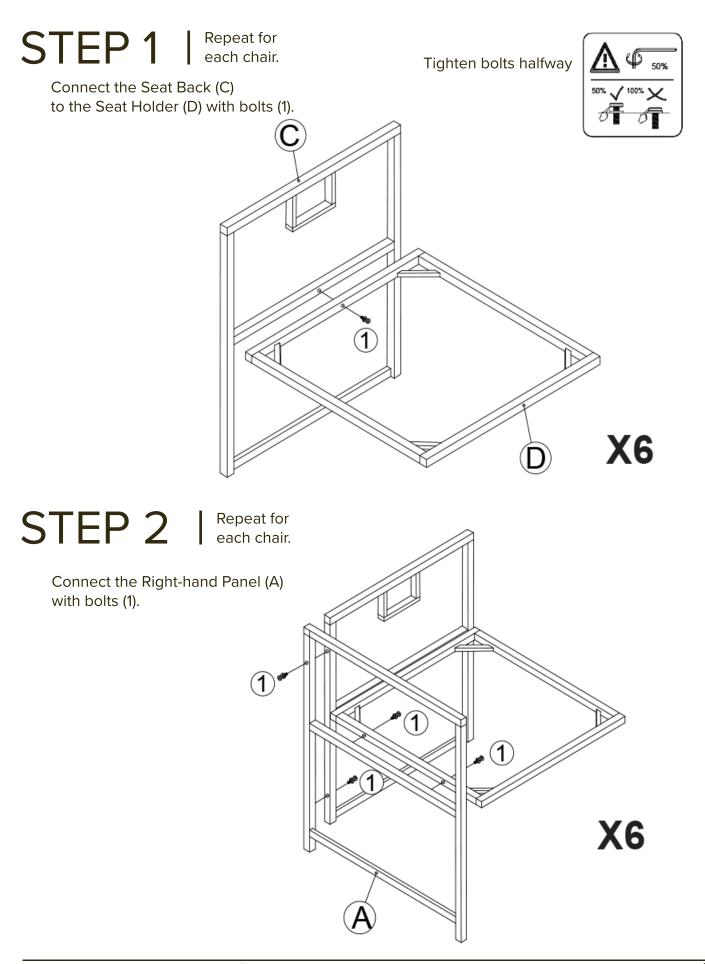

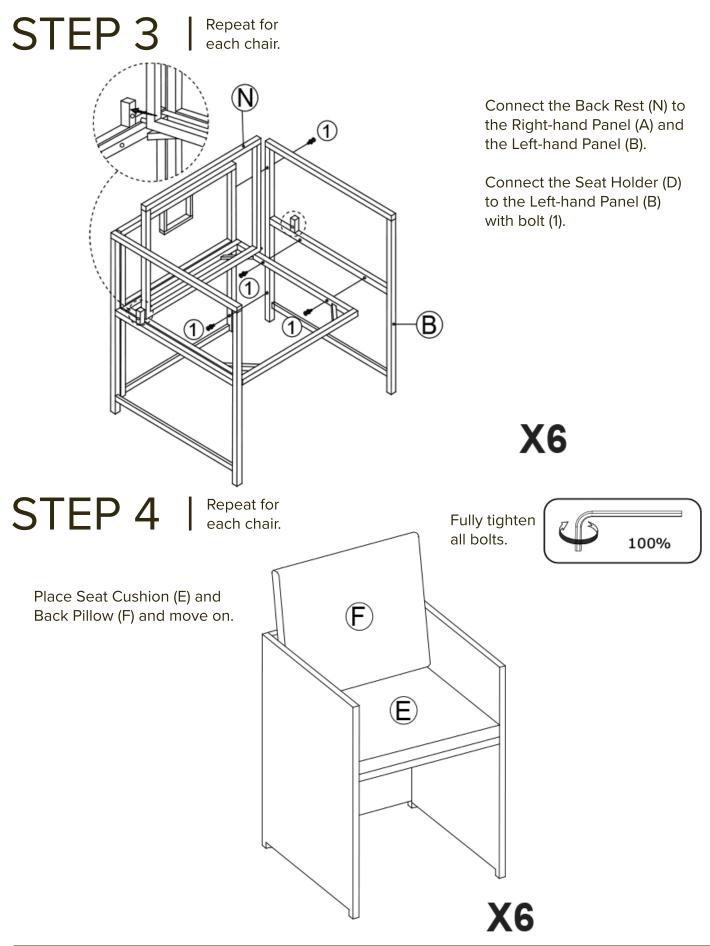


## STEP 5

Connect the Ottoman Leg (G) to the Ottoman Top Panel (I) using pin (2).

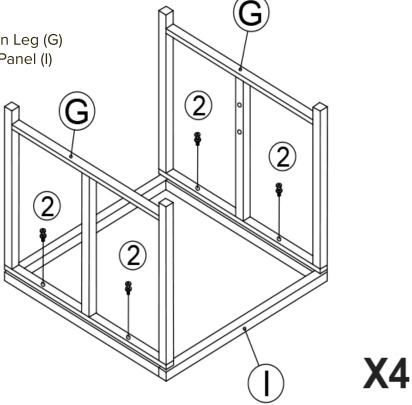




Connect Brace (H) between Ottoman Legs (G) with bolts (4).

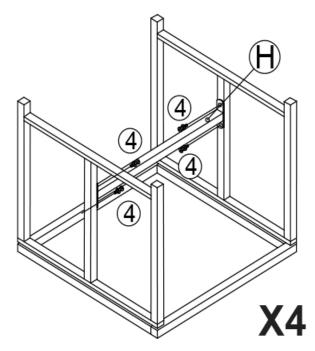







Fully tighten all bolts.

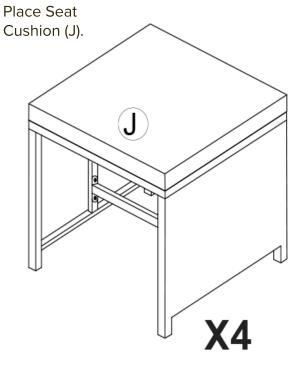


## STEP 8

Connect Table Tops (W, O, Q) with bolts (5).

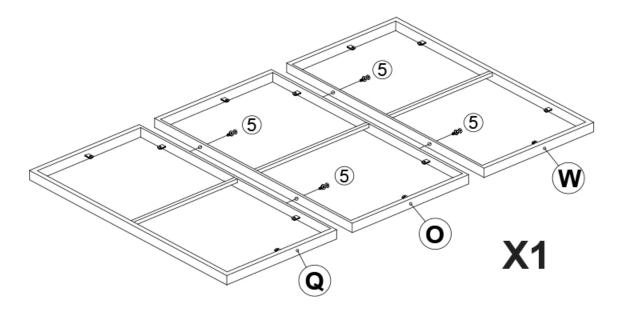

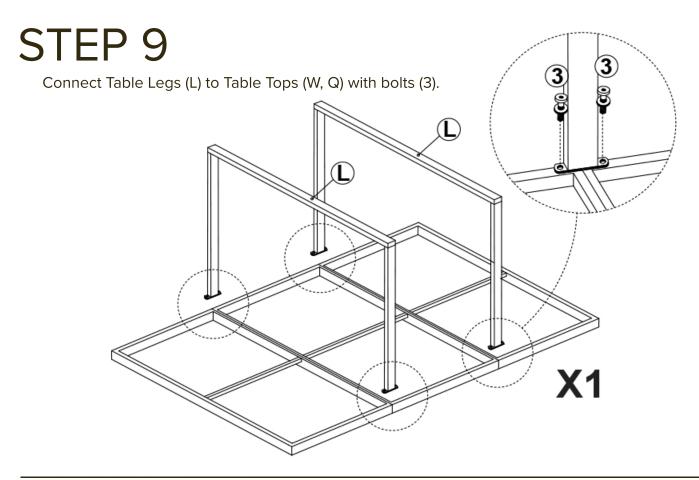

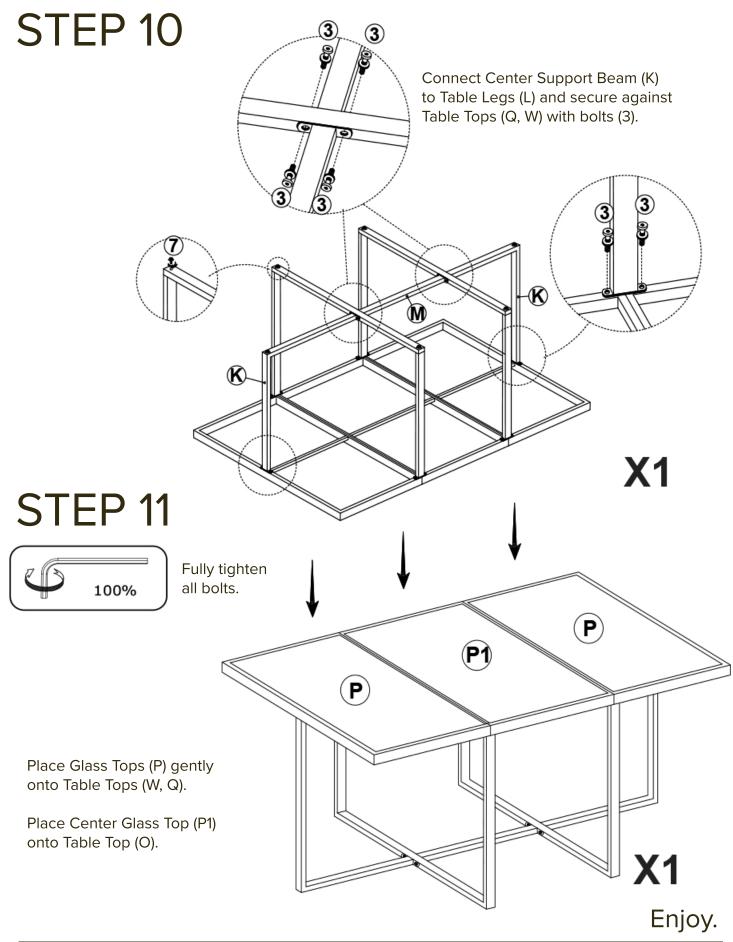

## Need some help?



1-888-980-5122



@museandloungeco



hello@museandlounge.com



Outdoor furniture naturally weathers and shows color variation over time. We recommend the following care for the best results:

- Wipe with a soft cloth.
- Wash with mild soap and water as needed; do not use abrasive cleaners.
- Cover furniture with an outdoor cover (not included) when not in use.
- Store in a dry, covered area during inclement weather or winter season.



After assembly is completed, save these instructions and any included tools for future maintenance or re-assembly.