# LuxenHömel

# **Instruction Manual**

Please save this manual for future reference.

Product Name:	Pre-Lit LED Porch Artificial Christmas Tree with Base
SKU #:	WH136 (4ft), WH137 (4ft), WHAP339 (4ft), WHAP340 (4.5ft), WHAP682 (4ft),
	WHAP684 (3ft), WHAP687 (4ft), WHAP688 (4ft), WHAP689 (3ft)

Thank you for purchasing this Luxen Home product. This product has been manufactured with the highest standards of safety and quality.

## This instruction and product manual apply to multiple items.

### PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.



# WARNING

- **1.** Risk of Fire and Electric Shock.
- 2. Read all instructions and warning tags included with this tree.
- 3. Do not place near fireplaces, candles, outdoor heaters, or other similar sources of heat.
- 4. Do not install near pools, fountains, tubs, sinks, or other areas of standing water that the tree may fall or blow into.
- 5. Disconnect tree's light sets from power before starting.
- 6. Keep wires clear of being pinched or cut during assembly or installation. Discard sets with cut or pinched insulation.
- 7. Do not press or grasp bulbs during assembly or installation.
- 8. Make sure final assembly stable enough to hold the tree upright.
- 9. Do not use candles on tree. Use only with the included mini lights.
- 10. Do not overload extension cords or power strips.
- 11. Only use with extension cords that are rated for outdoor use. Do not overload extension cords or power strips, see ratings on those devices and check the rating label of the tree and other products connected for compatibility.
- 12. Always fully insert electrical plugs into a receptacle.
- 13. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.

## No tools required for assembly.

### **Before You Start**

- 1. Decide on an appropriate location for your product, please read assembly and Instruction procedure carefully.
- 2. Retain the instructions for future use and save the carton for storing your tree.

# LuxenHömel

# **Instruction Manual**

Please save this manual for future reference.

Product Name:	Pre-Lit LED Porch Artificial Christmas Tree with Base
SKU #:	WH136 (4ft), WH137 (4ft), WHAP339 (4ft), WHAP340 (4.5ft), WHAP682 (4ft),
	WHAP684 (3ft), WHAP687 (4ft), WHAP688 (4ft), WHAP689 (3ft)

### Assembly and Instruction Procedure:

Every carton should contain a top section and a bottom section.

This will depend on what model you have purchased. Also included is a base.

- 1. Remove all packaging (i.e. cardboard or plastic) before beginning. Remove contents from packaging.
- 2. Choose a location where the tree is to be displayed.
- 3. Put the pot base on the ground then insert the tree body into the pot firmly. (See arrow A on Figure 1)
- 4. Gently lower all branch tips on tree. Take care not to place unnecessary pressure on the brackets during assembly (Figure 2).
- 5. The branches on your tree can be adjusted to give your tree the desired fullness. For best results, straighten and separate all branch tips, then bend them slightly upward.
- 6. Plug tree lights into a power outlet. (Figure 3)



Figure 1

Figure 2

Figure 3

## YOUR TREE IS NOW READY TO ENJOY!

## Storage Tips:

- 1. Disconnect power from the lights.
- 2. Remove all decorations.
- 3. Remove tree from urn by pulling up on center pole at base of tree.
- 4. Staring from the top, carefully press the tips back up against the stem.
- Store the product in a cool, dry location protected from sunlight where the temperature does not exceed 35°C (95°F).

## MADE IN CHINA