


ASSEMBLE INSTRUCTION

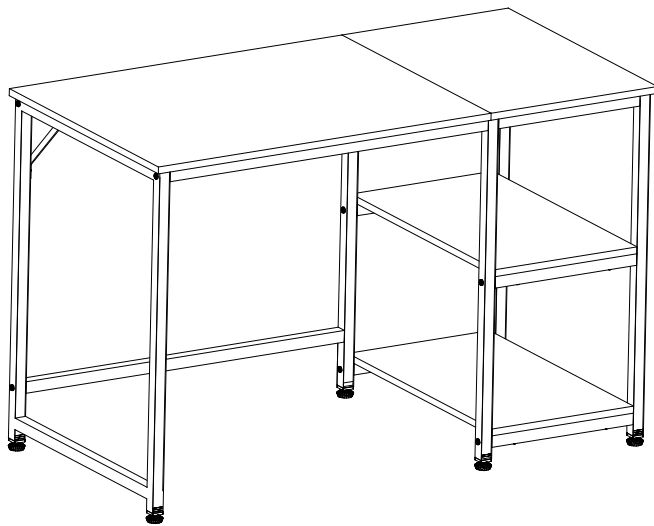



















MODEL: RH906T



WARNIN



○Please don't tighten all the screws until all in stalled

ACCESSORIES



①  x1	②  x1	③  x1
④  x1	⑤  x6	⑥  x1
⑦  x1	⑧  x1	⑨  x2
⑩  x2	⑪  x2	⑫  6x40 x16
⑬  6x35 x22	⑭  6x16 x4	⑮  6x60 x2
⑯  x2	⑰  x6	⑱  x6
Ⓐ  x1	Ⓑ  X1	

安装步骤



Step 1:

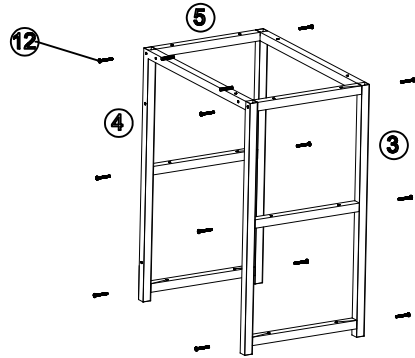



Step 2:

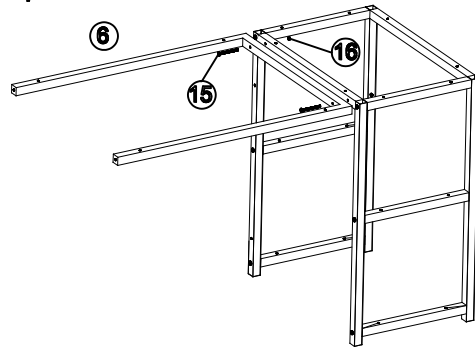




Step 3:

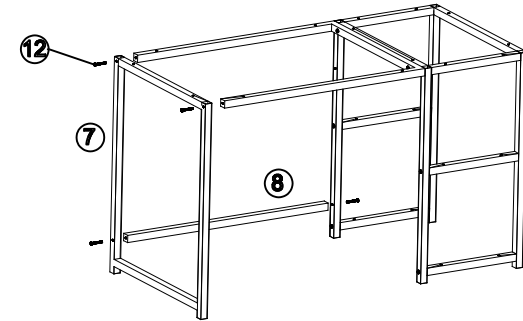

Step 4:

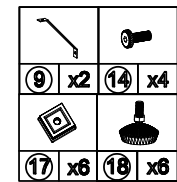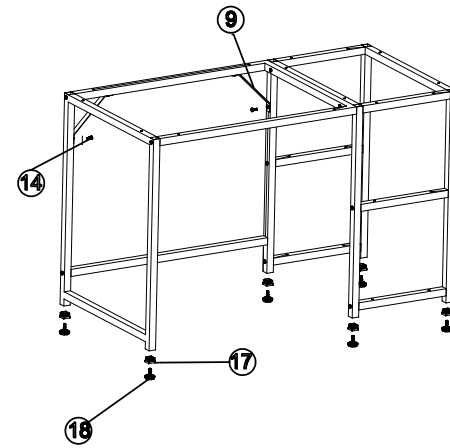

Step 5:

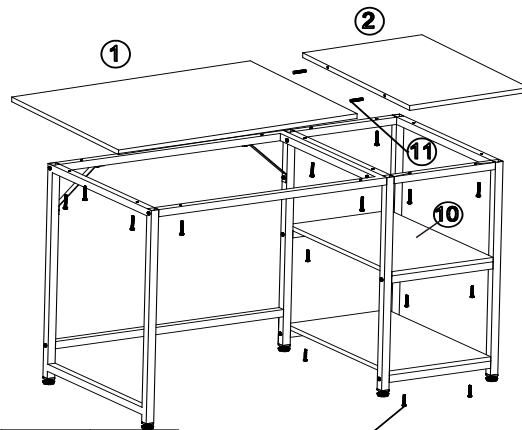

FINAL :

